

vtech®

Instruction Manual

LoLibirds



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Meet your new best friend, **LoLibirds!**

I love to go on adventures! Sit me on your shoulder by using the magnetic shoulder pad, and carry me with you wherever you go! I like to chitchat, talk to me and I will repeat what you say in a funny voice or sing back to you. Move me up, down & upside down to hear me make fun sounds and sing. I like to get dizzy!



Record
Button



Music
Button



Off/Shoulder Mode/
Cuddle Mode Switch



Magnetic
Shoulder Pad

INCLUDED IN THIS PACKAGE

- LoLibirds
- Magnetic Shoulder Pad
- Quick Start Guide

WARNING:


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.

NOTE: This toy bird has reduced volume to adhere to safety regulations for close-to-the-ear toys.

Unlock the Packaging Locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

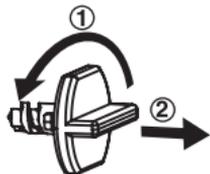


GETTING STARTED

The batteries included are for demo purposes only. Please replace the low capacity Try Me batteries with new batteries for the best performance. Slide the **Off/Shoulder Mode/Cuddle Mode Switch** to the **Shoulder Mode or Cuddle Mode** position to start.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

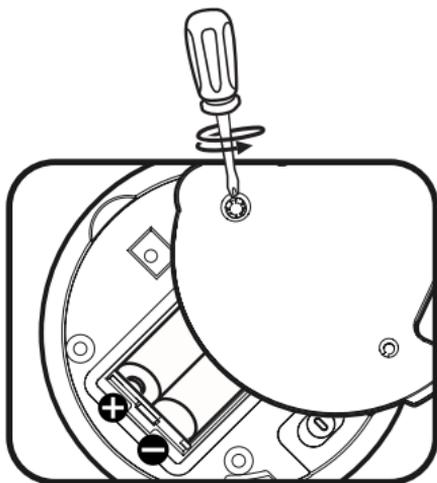

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Shoulder Mode/Cuddle Mode Switch

To turn the unit **ON**, slide the **Off/Shoulder Mode/Cuddle Mode Switch** to the Shoulder Mode or Cuddle Mode position. To turn the unit **OFF**, slide the **Off/Shoulder Mode/Cuddle Mode Switch** to the **OFF ●** position.



2. Automatic Shut Off


To preserve battery life, this toy will automatically power down after several seconds without input. The unit can be turned ON again by pressing any button.

NOTE: If the unit powers down while playing, please install a new set of batteries.

ACTIVITIES

1. Shoulder Mode Play

Slide the mode switch to Shoulder Mode. Place the magnetic shoulder pad on your shoulder under your t-shirt. Then, place your LoLibirds over your t-shirt above the magnetic shoulder pad. The magnetic shoulder pad will keep your LoLibirds perched on your shoulder. Press the Record Button or the Music Button to play with your LoLibirds (see #3 and #4 below).

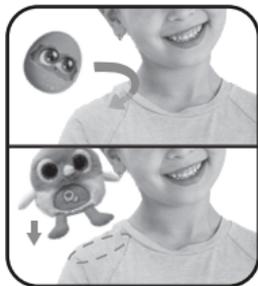

2. Cuddle Mode Play

Slide the mode switch to Cuddle Mode. Connect the magnetic shoulder pad to the bottom of your LoLibirds for safekeeping. Cuddle with your LoLibirds or place your LoLibirds on a flat surface to play. Turn your LoLibirds upside down or shake your LoLibirds for fun reactions. Press the Record Button or the Music Button to play with your LoLibirds (see #3 and #4 below).



3. Record and Playback

There are two ways to record and change your voice. LoLibirds can record and playback your voice in a silly way or translate your voice into bird tweets.

Silly Voice: Press the Record Button once. Wait for your LoLibirds' eyes to turn blue and the recording music to complete. Then, talk, sing or make funny sounds. Your LoLibirds will then playback your recording in a silly way.

Bird Tweets: Press the Record Button two times quickly. Wait for your LoLibirds' eyes to turn blue and the recording music to complete. Then, talk, sing or make funny sounds. Your LoLibirds will translate your recording into bird tweets.


LoLibirds can record up to 10 seconds. If you finish your recording before 10 seconds, press the Record Button again to stop the recording and hear your silly



playback.

4. **Fun Sounds and Music**

Press the **Music Button** on your LoLibirds' wing to hear delightful birdy music and fun bird sound effects.

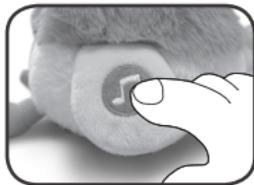

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power Off and back On, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

