

vtech[®]

Parent's Guide

Popping Surprise Seal



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Popping Surprise Seal!**

Playing with this cute and fun seal is sure to entertain your child! See the ball launch up into the seal's hat from his magical tail! Then, clap along with him in celebration! You can even enjoy songs, phrases and music at the press of a button, making playtime even more fun!

Please note:

 
This is not a bath toy. Do not submerge or expose the seal to water.

Warning:

Do not put, or attempt to launch anything other than the ball provided onto/from the seal's tail.

Warning:

When the seal launches it's ball into the air please ensure you are an appropriate distance away to avoid the ball coming too close to people's faces and eyes.

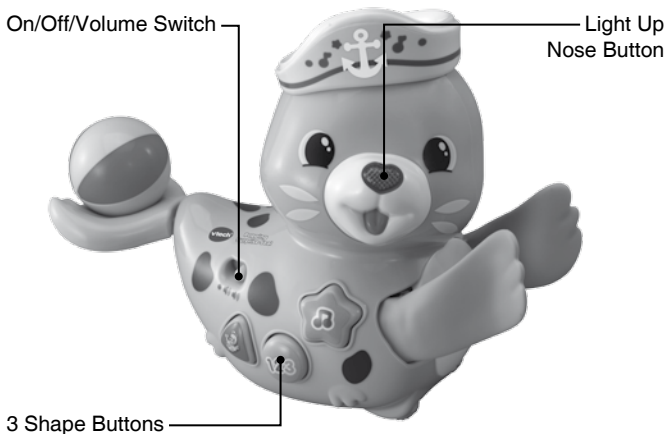

INCLUDED IN THIS PACKAGE

- One **Popping Surprise Seal**
- One Ball
- One Parent's Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please keep this Parent's Guide as it contains important information.

Removing the packaging locks:

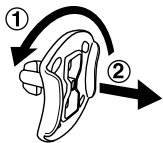


- ① Rotate the packaging locks anticlockwise 90 degrees.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the electronic module. Use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one side of each battery.
4. Install 4 new AA batteries following the diagram inside the battery box. (The use of a new alkaline battery is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

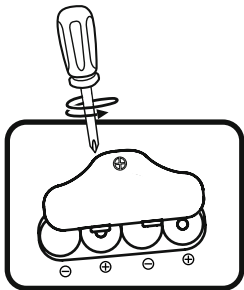

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.




For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the **Low Volume**  or **High Volume**  position. You will hear a song, phrase and fun sound. To turn the unit **Off**, slide the **On/Off Volume Switch** to the **Off**  position.

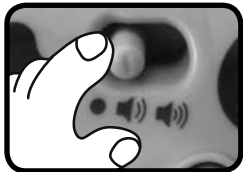

2. Light Up Nose Button

The Light Up Nose Button will teach the colour of the seal's nose, introduce the seal, and play playful songs and melodies.

3. Three Shape Buttons

The Three Shape Buttons introduce the seal, numbers, colours, shapes, and play playful songs and melodies.

4. Automatic Shut Off

To preserve battery life, the Popping Surprise Seal will automatically power down after approximately 50 seconds without input. The unit can be turned on again by pressing any button.

 
Note:

This product is in Try Me mode in the packaging. After opening the package, turn the unit off and on again to proceed with normal play. If the unit repeatedly powers down while playing, please install a new set of batteries.

ACTIVITIES

1. Light Up Nose Button

Press the **Light Up Nose Button** to learn about the colour of seal's nose and to play playful songs and melodies. The light will flash with the sounds.

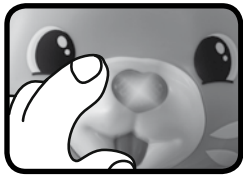

2. Shape Buttons

Press the **Shape Buttons** to learn colours, shapes, numbers, to introduce the seal, and to play playful songs and melodies. The light will flash with the sounds.



3. Magic Sensor

Put the ball on the seal's tail, then see the ball launch up into the hat. The **Magic Sensor** on Seal's hat can recognise the ball and will play fun phrases and sound effects. Seal will also, move forward and clap his hands.



Note:

If the unit repeatedly powers down while playing, please install a new set of batteries.

SING-ALONG SONG LYRICS

Song 1

I'm a playful seal, I love to play,
I flip my tail, then watch and see.
The ball will land on top of my hat,
Then I'll clap my hands happily!

Song 2

I like to clap, clapping is fun.
Clap your hands together!
Follow along and clap with me.
One, two, three, clap, clap, clap!

Song 3

Hello, my friend,
I live in the sea!
We can play together and sing so happily!

MELODY LIST

1. Alouette
2. Alphabet Song
3. Animal Fair
4. Bingo
5. Camptown Races
6. Entertainer
7. Pop Goes the Weasel
8. Toyland
9. Ta Ra Ra Boom De Ay
10. Yankee Doodle
11. She'll Be Comin' 'Round the Mountain
12. Row, Row, Row Your Boat
13. Skip To My Lou
14. Mulberry Bush
15. Can-can

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

