

CLEANING INSTRUCTIONS (con't)

- DO NOT expose your Pet to moisture of any kind except when using a slightly damp cloth to remove stains.
- Wipe dirt off immediately to prevent stains.
- If the Pet gets wet, remove the batteries immediately and let the Pet air dry.
- DO NOT put the Pet into a dryer or subject it to heat of any kind.

IMPORTANT INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE..

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION

1. DO NOT sit or stand on any part of the Pet.
2. Avoid spilling food or beverages on the Pet.
3. DO NOT throw or kick the Pet.
4. Keep pet away from moisture.

Please keep this manual as it contains important information.



0506-0

www.rescue-pets.com
Rescue Pets™. Used under exclusive license from AAA. All other materials, including character art, the pets themselves and all related artwork, logos, designs and packaging, © and TM MGA Entertainment.
16300 Roscoe Blvd.
Van Nuys, CA 91406 USA
(800) 222-4685
Printed in China

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com



Ages 3+

Item no.: 336709

 
ADULT BATTERY INSTALLATION REQUIRED

INTRODUCTION

This puppy is so thankful that you adopted it that it wants to do you a favor in return! Just set the clock on its collar and when the time comes, it'll sit up and bark until you wake up!

CONTENTS

- a. 1 Rescue Pet™ with Alarm Clock
- b. 1 Adoption Certificate
- c. 1 Name Sticker

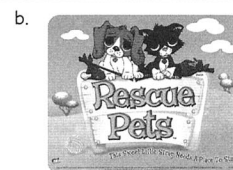


BEFORE YOU BEGIN

"Try Me" Batteries are included for in-store demonstration only. Please change batteries before playing with the toy.

TO INSTALL BATTERIES: Pet Battery Installation




- Battery installation should be performed by an adult
1. Pull back the plush flap located on the bottom of the pet. (See Fig. 1)
 2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover. (See Fig. 2)
 3. Insert three (3) AAA batteries (not included) with the positive (+) and negative (-) ends facing the proper direction as indicated inside the battery compartment.
 4. Replace the battery compartment cover and tighten the screw.
 5. Move the "ON/OFF/TRY ME" switch to ON.
 6. Replace the plush flap covering the battery area.

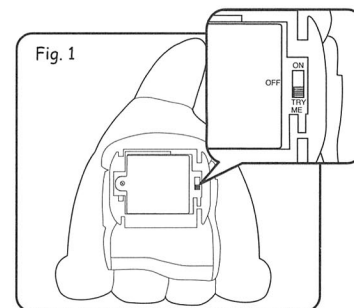

Clock Battery Installation

Battery installation should be performed by an adult.

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover on the back of the clock.
2. Insert one (1) button cell CR2032 battery with the positive (+) and negative (-) ends facing the proper direction as indicated inside the battery compartment. (See Fig. 3)
3. Replace the battery compartment cover and tighten the screw.
4. Set the clock using the procedures listed later in this manual.

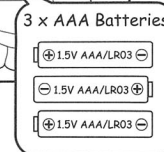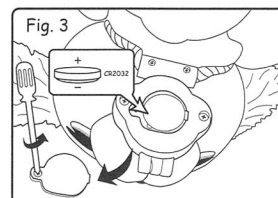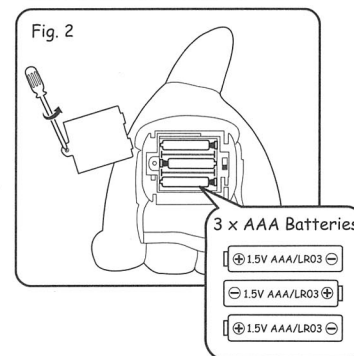

QUICK START

ADOPTING YOUR RESCUE PET™

Officially adopt your Wake Me Up Rescue Pet™ by filling in the adoption certificate information. To do so, go to:

- www.rescue-pets.com
- Click on "Adoption Center."
- Click on the picture of your pet.
- Fill in the Adoption Certificate.
- Click on "Create Certificate."
- Click on the size of Certificate you wish to print from "Print Options".
- Click "Print", then click "Done."
- You have officially adopted your very own Rescue Pet™.

There are many more fun things to do on the rescue-pets site. Check it out and keep coming back.

YOUR RESCUE PET NAME STICKER

Once you have named your Rescue Pet™, write the name on the sticker provided,

- Open the front of the clock.
- Peel the sticker off its backing.
- Place the sticker on the inside of the Clock cover (See Fig. 4) and close the clock cover.

TO SELECT MODE FOR PETS:

Slide the ON/OFF/TRY ME switch to the ON position (See Fig.1)

NOTE: In TRY ME mode, press the left paw and your pet will sit up, bark, move its head from side to side and wag its tail. Also, the Alarm function is disabled in this mode.

SETTING THE CLOCK

Before setting the clock, remove the tab from the back side of the clock by pulling it out completely. This will activate the clock.

SETTING THE TIME (See Figs. 4 to 6)





- Press the "Mode" button (until "AL" is not shown in the center of the display) to select the Clock display mode.
- Press "Set" once and the hour will flash.
- Press "Inc" until you reach the hour you wish.
- Press "Set" again and the minutes will flash.
- Press "Inc" until you reach the minutes you wish.
- Press "Set" again to confirm the time you have chosen.

NOTE: "PM" will show on the left side of the display for afternoon. If the left side of the display is blank in the same area, the clock is in "AM" mode.

SETTING THE ALARM



- Turn the Alarm Switch to OFF position.
- Press the "Mode" button (until "AL" appear in the center of the display) to select the Alarm display mode.
- Press "Set" once and the hour will flash.
- Press "Inc" until you reach the hour you wish.
- Press "Set" again and the minutes will flash.
- Press "Inc" until you reach the minutes you wish.
- Press "Set" again to confirm the Alarm time you have chosen.
- Turn the Alarm Switch to the ON position to activate the alarm function. (A Bell icon will appear on the display and, in a few seconds, the Rescue Pet™ will lie down.
- To turn the Alarm off, move the Alarm Switch to the OFF position. (The Bell icon will disappear from the display and the pet will sit up.)

NOTE: The Alarm function is disabled in TRY ME mode.

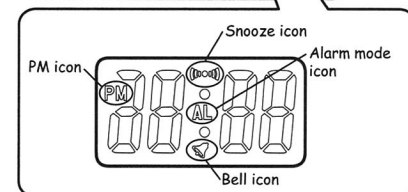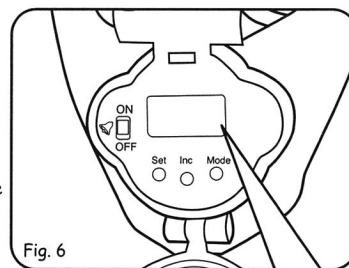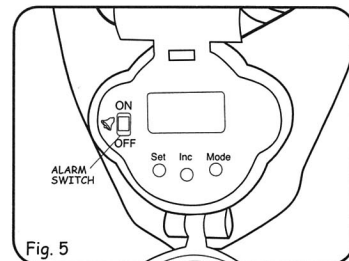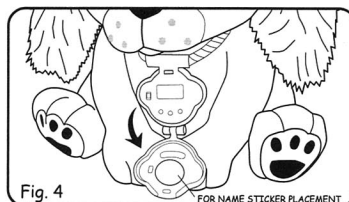

QUICK START (con't)

- After you have set the alarm, your Pet will lie down and sleep until it's time to wake you up.
- When it's time to wake you up, your Rescue Pet™ will sit up, bark, wag its tail and move its head from side to side. (See Figs. 7 to 9)
- If you don't wish to get up right away, press the "snooze" area on your pet's forehead (See Fig. 9) and your pet will wait 5 minutes before it tries to wake you again. You may "snooze" 3 times.
- The fourth time you press the "snooze" will turn the alarm off.
- If you don't press the "snooze" area on your pet's forehead, it barks for 1 minute. After it stop barking, if you turn Alarm Switch from ON to OFF, then turn to ON again, your pet will lie down and go to sleep.

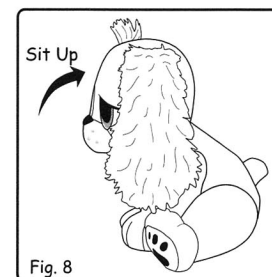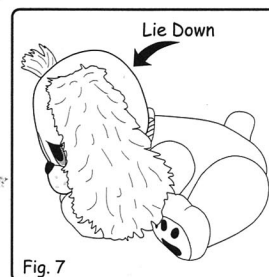

SAFE BATTERY USAGE

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Do not dispose the batteries in fire, batteries may leak or explode;
- Batteries should be replaced by adult;
- Use alkaline batteries for better performance.

TROUBLESHOOTING

- If the motion of your Rescue Pet™ becomes slow and/or the voice becomes weak, replace the batteries with fresh AAA Alkaline batteries.

CLEANING INSTRUCTIONS

To clean your Pet, brush it with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove any stains.

- DO NOT put your Pet into the washing machine.
- DO NOT use detergent or stain removers on the plush covering of the Pet.
- DO NOT submerge your Pet in water.